

2002 Corvette: Diagnostic Trouble Codes

DTC B0016, B0017, or B0018

Right Front/Passenger Frontal Deployment Loop (Stage 1) Circuit

DTC B0022, B0024, or B0026

Left Front/Driver Frontal Deployment Loop (Stage 1) Circuit

DTC B0051

Deployment Commanded

DTC B0053

Deployment Commanded with Loop Malfunctions Present

DTC B0090

Active Switch Voltage Out of Range

DTC B0091

Active Switch: Wrong State

DTC B0332

Outside Air Temp Sensor Short to Ground

DTC B0333

Outside Air Temperature Sensor Open

DTC B0337

Inside Air Temp Sensor Short to GND

DTC B0338

Inside Air Temperature Sensor Open

DTC B0348

Sunload Temperature Sensor Open

DTC B0361

Left Actuator Feedback Short to GND

DTC B0363

Left Actuator Feedback Open

DTC B0365
Right Actuator Feedback Short to GND

DTC B0367
Right Actuator Feedback Open

DTC B0432
Rear Defogger Relay Circuit

DTC B0433
Rear Defogger Relay Circuit

DTC B0441
Left Actuator Out of Range

DTC B0446
Right Actuator Out of Range

DTC B0502
RH DRL Relay Circuit

DTC B0503
RH DRL Relay Circuit

DTC B0507
LH DRL Relay Circuit

DTC B0508
LH DRL Relay Circuit

DTC B0516
Speedometer Signal Circuit Malfunction

DTC B0521
Tachometer Signal Circuit Malfunction

DTC B0605
BCM Internal Memory Malfunction

DTC B0846
Battery 2 Out of Range

DTC B0846 or B0851

Battery Out of Range

DTC B0851

Battery 1 Out of Range

DTC B0856

+5 Volt Reference Out of Range

DTC B1000

ECU Malfunction

DTC B1001

Option Configuration Error

DTC B1512-B1537

Driver Information Center (DIC) Switch Circuit

DTC B1542

Oil Temperature Circuit Short to Ground

DTC B1543

Oil Temperature Circuit Open

DTC B2172, B2177, B2182, B2187, B2192, or B2197

Power Seat Switch Circuit

DTC B2202-B2208

Window Switch Circuit

DTC B2222-B2224

Mirror Select Switch Circuit

DTC B2226-B2234

Mirror Switch Circuit

DTC B2236-B2239

Door Lock Switch Circuit

DTC B2242-B2244

Memory Switch Circuit

DTC B2252-B2253

Door Key Cylinder Circuit

DTC B2262-B2265
Mirror Position Sensor Signal Circuit

DTC B2272-B2273
Mirror Motor Control Circuit

DTC B2274-B2275
Window Motor Control Circuit

DTC B2276-B2277
Door Lock Control Circuit

DTC B2282
Battery #1 Circuit

DTC B2283
Battery #1 Circuit

DTC B2284
Battery #2 Circuit

DTC B2285
Battery #2 Circuit

DTC B2286-B2287
Mirror Position Sensor Circuit

DTC B2403
Front Fog Lamp Switch Circuit

DTC B2408
Rear Fog Lamp Switch Circuit

DTC B2482
Backup Lamp Relay Circuit

DTC B2483
Backup Lamp Relay Circuit

DTC B2527
Horn Relay Circuit

DTC B2528
Horn Relay Circuit

DTC B2567
Folding Top Release Switch Circuit

DTC B2573
Hatch Release Switch Circuit

DTC B2578
Right Front Turn Signal Monitor Circuit

DTC B2583
Left Front Turn Signal Monitor Circuit

DTC B2587
Column Lock/Unlock Drive A

DTC B2588
Column Lock/Unlock Drive A

DTC B2592
Column Lock/Unlock Drive B

DTC B2593
Column Lock/Unlock Drive B

DTC B2597
Traction Control System Switch Circuit

DTC B2600
Seat Motor to Battery Voltage

DTC B2605-B2607
Seat Position Sensor Circuit

DTC B2647
Ambient Light Sensor Circuit Low

DTC B2648
Ambient Light Sensor Circuit High

DTC B2721

PASS-Key Detection Circuit

DTC B2722

PASS-Key Detection Circuit

DTC B2723

PASS-Key Detection Circuit

DTC B2735

PASS-Key Programming Mode Active

DTC B2795

Suspension Control Select Switch Circuit Malfunction

DTC B2852

Telescoping Column In Switch Shorted to Ground

DTC B2857

Telescoping Column Out Switch Shorted to Ground

DTC B2860

Telescoping Column Position Sensor Failure

DTC B3109

Keyless Entry Transmitter Low Battery

DTC B3577

Suspension Control Select Switch Contact Malfunction

DTC C0550

ECU Malfunction

DTC C0563

Calibration ROM Checksum Error

DTC C0615, C0620, C0625 or C0630

Suspension Position Sensor Circuit

DTC C0665

Chassis Pitch Signal Circuit

DTC C0690

Damper Control Relay Circuit Malfunction

DTC C0691
Damper Control Relay Circuit Range

DTC C0693
Damper Control Relay Circuit High

DTC C0695
Position Sensor Overcurrent (8 volt supply)

DTC C0710
Steering Position Signal Malfunction

DTC C0750, C0755, C0760, or C0765
Tire Pressure Sensor Circuit

DTC C1214
Solenoid Valve Relay Contact or Coil Circuit Open

DTC C1217
Pump Motor Relay Contact Circuit Open

DTC C1218
Pump Motor Circuit Shorted to Voltage or Motor Ground Open

DTC C1221-C1235
Wheel Speed Sensor Circuit

DTC C1236
Low System Supply Voltage

DTC C1237
High System Supply Voltage

DTC C1241
MAGNA STEER Circuit Malfunction

DTC C1242 or C1243
Pump Motor Circuit

DTC C1247
Brake Pressure Differential Switch Activated

DTC C1248
DRP Disabled

DTC C1254
Abnormal Shutdown Detected

DTC C1255 or C1256
ECU Malfunction

DTC C1261-C1274
EBCM Internal Solenoid Circuit

DTC C1276, P1644, or P1689
Delivered Torque Circuit

DTC C1277 or P1571
Powertrain Indicated Traction Control Malfunction

DTC C1278
TCS Temporarily Inhibited By PCM

DTC C1281, C1283, or C1286
VSES Sensors Uncorrected

DTC C1282
Yaw Rate Sensor Bias Circuit Malfunction

DTC C1284 or C1285
Lateral Accelerometer Circuit

DTC C1287 or C1288
Steering Position Sensor Circuit

DTC C1291
Open Brake Lamp Switch Contacts During Deceleration

DTC C1292, C1293, or C1296
Master Cylinder Pressure Sensor Circuit

DTC C1294
Brake Lamp Switch Circuit Always Active

DTC C1295

Brake Lamp Switch Circuit Open

DTC P0101

Mass Air Flow (MAF) Sensor Performance

DTC P0102

Mass Air Flow (MAF) Sensor Circuit Low Frequency

DTC P0103

Mass Air Flow (MAF) Sensor Circuit High Frequency

DTC P0106

Manifold Absolute Pressure (MAP) Sensor Performance

DTC P0107

Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage

DTC P0108

Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage

DTC P0112

Intake Air Temperature (IAT) Sensor Circuit Low Voltage

DTC P0113

Intake Air Temperature (IAT) Sensor Circuit High Voltage

DTC P0116

Engine Coolant Temperature (ECT) Sensor Performance

DTC P0117

Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage

DTC P0118

Engine Coolant Temperature (ECT) Sensor Circuit High Voltage

DTC P0125

Engine Coolant Temperature (ECT) Insufficient for Closed Loop Fuel Control

DTC P0128

Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature

DTC P0131 or P0151

HO2S Circuit Low Voltage

DTC P0132 or P0152
HO2S Circuit High Voltage

DTC P0133 or P0153
HO2S Slow Response

DTC P0134 or P0154
HO2S Circuit Insufficient Activity

DTC P0135, P0141, P0155, or P0161
HO2S Heater Performance

DTC P0137 or P0157
HO2S Circuit Low Voltage

DTC P0138 or P0158
HO2S Circuit High Voltage

DTC P0140 or P0160
HO2S Circuit Insufficient Activity

DTC P0171 or P0174
Fuel Trim System Lean

DTC P0172 or P0175
Fuel Trim System Rich

DTC P0200
Injector Control Circuit

DTC P0218
Transmission Fluid Overtemperature

DTC P0230
Fuel Pump Relay Control Circuit

DTC P0300
Engine Misfire Detected

DTC P0325
Knock Sensor Module Performance

DTC P0335

Crankshaft Position (CKP) Sensor Circuit

DTC P0336

Crankshaft Position (CKP) Sensor Performance

DTC P0341

Camshaft Position (CMP) Sensor Performance

DTC P0342

Camshaft Position (CMP) Sensor Circuit Low Voltage

DTC P0343

Camshaft Position (CMP) Sensor Circuit High Voltage

DTC P0351-P0358

Ignition Coil Control Circuit

DTC P0410

Secondary Air Injection (AIR) System

DTC P0418

Secondary Air Injection (AIR) Pump Relay Control Circuit

DTC P0420 or P0430

Catalyst System Low Efficiency

DTC P0440

Evaporative Emission (EVAP) System

DTC P0442

Evaporative Emission (EVAP) System Small Leak Detected

DTC P0443

Evaporative Emission (EVAP) Purge Solenoid Control Circuit

DTC P0446

Evaporative Emission (EVAP) Vent System Performance

DTC P0449

Evaporative Emission (EVAP) Vent Solenoid Control Circuit

DTC P0452

Fuel Tank Pressure Sensor Circuit Low Voltage

DTC P0453

Fuel Tank Pressure Sensor Circuit High Voltage

DTC P0461

Fuel Level Sensor Performance

DTC P0462

Fuel Level Sensor Circuit Low Voltage

DTC P0463

Fuel Level Sensor Circuit High Voltage

DTC P0480

Cooling Fan Relay 1 Control Circuit

DTC P0481

Cooling Fan Relay 2 and 3 Control Circuit

DTC P0500

Vehicle Speed Sensor (VSS) Circuit

DTC P0502

Vehicle Speed Sensor (VSS) Circuit Low Input

DTC P0503

Vehicle Speed Sensor (VSS) Circuit Intermittent

DTC P0506 or P0507

Incorrect Idle Speed

DTC P0522

Engine Oil Pressure (EOP) Sensor Circuit Low Voltage

DTC P0523

Engine Oil Pressure (EOP) Sensor Circuit High Voltage

DTC P0530

Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit

DTC P0562

System Voltage Low

DTC P0563
System Voltage High

DTC P0567
Cruise Control Resume Switch Circuit

DTC P0568
Cruise Control Set Switch Circuit

DTC P0571
Cruise Control Brake Switch Circuit

DTC P0601-P0607, P1600, P1621, P1627, P1680, P1681, or P1683
ECU Malfunction

DTC P0608
Vehicle Speed Output Circuit

DTC P0645
Air Conditioning (A/C) Clutch Relay Control Circuit

DTC P0650
Malfunction Indicator Lamp (MIL) Control Circuit

DTC P0654
Engine Speed Output Circuit

DTC P0704
Clutch Switch Circuit

DTC P0706
Trans Range Switch Performance

DTC P0711
TFT Sensor Circuit Range/Performance

DTC P0712
Transmission Fluid Temperature (TFT) Sensor Circuit Low Input

DTC P0713
Transmission Fluid Temperature (TFT) Sensor Circuit High Input

DTC P0719
Brake Switch Circuit Low Input

DTC P0724
Brake Switch Circuit High Input

DTC P0740
TCC Enable Solenoid Circuit Electrical

DTC P0742
TCC System Stuck On

DTC P0748
Pressure Control Solenoid Circuit Electrical

DTC P0751
1-2 Shift Solenoid Valve Performance

DTC P0752
1-2 Shift Solenoid (SS) Valve Performance - No Second Or Third Gear

DTC P0753
1-2 Shift Solenoid Circuit Electrical

DTC P0756
2-3 Shift Solenoid Valve Performance

DTC P0757
2-3 Shift Solenoid (SS) Valve Performance - No Third Or Fourth Gear

DTC P0758
2-3 Shift Solenoid Circuit Electrical

DTC P0785
3-2 Shift Solenoid Circuit Electrical

DTC P0801
Reverse Inhibit Solenoid Control Circuit

DTC P0803
Skip Shift Solenoid Control Circuit

DTC P0804

Skip Shift Lamp Control Circuit

DTC P1111

Intake Air Temperature (IAT) Sensor Circuit Intermittent High Voltage

DTC P1112

Intake Air Temperature (IAT) Sensor Circuit Intermittent Low Voltage

DTC P1114

Engine Coolant Temperature (ECT) Sensor Circuit Intermittent Low Voltage

DTC P1115

Engine Coolant Temperature (ECT) Sensor Circuit Intermittent High Voltage

DTC P1120

Throttle Position (TP) Sensor 1 Circuit

DTC P1125

Accelerator Pedal Position (APP) System

DTC P1133 or P1153

HO2S Insufficient Switching

DTC P1134 or P1154

HO2S Transition Time Ratio

DTC P1220

Throttle Position (TP) Sensor 2 Circuit

DTC P1221

Throttle Position (TP) Sensor 1- 2 Correlation

DTC P1258

Engine Coolant Overtemperature - Protection Mode Active

DTC P1275

Accelerator Pedal Position (APP) Sensor 1 Circuit

DTC P1276

Accelerator Pedal Position (APP) Sensor 1 Performance

DTC P1280

Accelerator Pedal Position (APP) Sensor 2 Circuit

DTC P1281
Accelerator Pedal Position (APP) Sensor 2 Performance

DTC P1285
Accelerator Pedal Position (APP) Sensor 3 Circuit

DTC P1286
Accelerator Pedal Position (APP) Sensor 3 Performance

DTC P1336
Crankshaft Position (CKP) System Variation Not Learned

DTC P1380
Misfire Detected - Rough Road Data Not Available

DTC P1381
Misfire Detected - No Communication with Brake Control Module

DTC P1415 or P1416
Secondary Air Injection (AIR) System

DTC P1431
Fuel Level Sensor 2 Performance

DTC P1432
Fuel Level Sensor 2 Circuit Low Voltage

DTC P1433
Fuel Level Sensor 2 Circuit High Voltage

DTC P1441
Evaporative Emission (EVAP) System Flow During Non-Purge

DTC P1514
Throttle Body Performance

DTC P1515
Control Module Throttle Actuator Position Performance

DTC P1516
Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance

DTC P1517

Throttle Actuator Control (TAC) Module Performance

DTC P1518

Throttle Actuator Control (TAC) Module Serial Data Circuit

DTC P1539

Air Conditioning (A/C) Clutch Feedback Circuit High Voltage

DTC P1546

Air Conditioning (A/C) Clutch Feedback Circuit Low Voltage

DTC P1574

Stoplamp Switch Circuit

DTC P1575

Extended Travel Brake Switch Circuit

DTC P1626

Theft Deterrent Fuel Enable Signal Lost

DTC P1630

Theft Deterrent Learn Mode Active

DTC P1631

Theft Deterrent Start Enable Signal Not Correct

DTC P1635

5 Volt Reference 1 Circuit

DTC P1637

Generator L-Terminal Circuit

DTC P1638

Generator F-Terminal Circuit

DTC P1639

5 Volt Reference 2 Circuit

DTC P1652

Powertrain Induced Chassis Pitch Output Circuit

DTC P1810

TFP Valve Position Switch Circuit

DTC P1860

TCC PWM Solenoid Circuit Electrical

DTC P1870

Transmission Component Slipping

DTC U1000 and U1255

Class 2 Communication Malfunction

DTC U1001-U1254

Lost Communication with XXX

DTC U1300, U1301, or U1305

Class 2 Data Link Shorted

Online URL: <https://www.corvetteactioncenter.com/tech/knowledgebase/article/2002-corvette-diagnostic-trouble-codes-228.html>