

# 2005 Corvette: LS2 Engine Trouble Codes Listing

## DTC Descriptor Module That Sets the DTC

B0001 Vehicle Speed Information Circuit Range/Performance Navigation Radio  
B0005 In Park Switch Circuit BCM, SCLCM  
B0012 Passenger Frontal Deployment Loop Stage 2 Resistance Low SDM  
B0013 Passenger Frontal Deployment Loop Stage 2 Open SDM  
B0014 Passenger Frontal Deployment Loop Stage 2 Voltage Out of Range SDM  
B0016 Passenger Frontal Deployment Loop Stage 1 Resistance Low SDM  
B0017 Passenger Frontal Deployment Loop Stage 1 Open SDM  
B0018 Passenger Frontal Deployment Loop Stage 1 Voltage Out of Range SDM  
B0022 Driver Frontal Deployment Loop Stage 1 Resistance Low SDM  
B0024 Driver Frontal Deployment Loop Stage 1 Voltage Out of Range SDM  
B0026 Driver Frontal Deployment Loop Stage 1 Open SDM  
B0028 Right Front Side Deployment Loop Resistance Low SDM  
B0029 Right Front Side Deployment Loop Open SDM  
B0030 Right Front Side Deployment Loop Voltage Out of Range SDM  
B0040 Left Front Side Deployment Loop Resistance Low SDM  
B0041 Left Front Side Deployment Loop Open SDM  
B0042 Driver Frontal Deployment Loop Stage 2 Resistance Low SDM  
B0043 Driver Frontal Deployment Loop Stage 2 Voltage Out of Range SDM  
B0044 Driver Frontal Deployment Loop Stage 2 Open SDM  
B0045 Left Front Side Deployment Loop Voltage Out of Range SDM  
B0051 Deployment Commanded SDM  
B0053 Deployment Commanded with Loop DTCs Present SDM  
B0057 Right Front Pretensioner Deployment Loop Resistance Low SDM  
B0058 Right Front Pretensioner Deployment Loop Open SDM  
B0059 Right Front Pretensioner Deployment Loop Voltage Out of Range SDM  
B0064 Left Front Pretensioner Deployment Loop Resistance Low SDM  
B0065 Left Front Pretensioner Deployment Loop Open SDM  
B0066 Left Front Pretensioner Deployment Loop Voltage Out of Range SDM  
B0077 Driver Side Impact Sensor (SIS) Performance SDM  
B0078 Passenger Side Impact Sensor (SIS) Performance SDM  
B0079 Incorrect Driver Side Impact Sensor (SIS) Installed SDM

B0080 Discard Driver Side Impact Sensor (SIS) SDM  
B0081 Incorrect Passenger Side Impact Sensor (SIS) Installed SDM  
B0082 Discard Passenger Side Impact Sensor (SIS) SDM  
B0083 Right Front Seat Position Sensor Circuit SDM  
B0084 Left Front Seat Position Sensor Circuit SDM  
B0090 Active Switch Voltage Out of Range SDM  
B0091 Active Switch: Wrong State SDM  
B0100 Front End Sensor 1 Performance SDM  
B0101 Discard Front End Sensor 1 SDM  
B0102 Incorrect Front End Sensor 1 Installed SDM  
B0103 Front End Sensor 2 Performance SDM  
B0104 Discard Front End Sensor 2 SDM  
B0105 Incorrect Front End Sensor 2 Installed SDM  
B0159 Outside Air Temperature Sensor Circuit HVAC  
B0164 Passenger Compartment Temperature Sensor Circuit HVAC  
B0174 Output Air Temperature Sensor 1 HVAC  
B0179 Output Air Temperature Sensor 2 HVAC  
B0184 Solar Load Sensor 1 Circuit Performance HVAC  
B0189 Solar Load Sensor 2 Circuit Performance HVAC  
B0248 Air Flow Control 3 Circuit HVAC  
B0249 Air Flow Control 3 Circuit Range HVAC  
B0268 Air Flow Control 7 Circuit HVAC  
B0269 Air Flow Control 7 and Circuit Range HVAC  
B0408 Temperature Control 1 Circuit HVAC  
B0409 Temperature Control 1 Circuit Range HVAC  
B0419 Temperature Control 2 Circuit Range HVAC  
B0423 Temperature Control 2 Circuit HVAC  
B0510 Output Air Temperature Sensor 3 HVAC  
B0515 Output Air Temperature Sensor 4 HVAC  
B0976 Power Mode OFF Indicator Circuit BCM  
B0977 Power Mode START Indicator Circuit BCM  
B0978 Power Mode ACCESSORY Indicator Circuit BCM  
B1000 Electronic Control Unit (ECU) Performance DSCC, BCM, DDM, DRR, RCDLR,  
FTC, HUD, HVAC, IPC, PDM, Radio, SCLCM, SDM, VCIM  
B1001 Option Configuration Error BCM  
DRR, Radio,  
SDM  
B1004 Keep Alive Memory (KAM) Reset Audio Amplifier, DDS, HVAC, SCLCM,  
VCIM

B1007 EEPROM Write Error Audio Amplifier, DDS, DPM, FTC, SCLCM  
B1009 EEPROM Checksum Mismatch Audio Amplifier, DDS, DPM, FTC, SCLCM, VCIM  
B1011 System Disabled Information Stored DDM, PDM  
FTC  
B1013 Calibration Read Only Memory (ROM) Checksum Error HVAC  
B1014 Program Read Only Memory (ROM) Checksum Error HVAC  
B1259 Antenna Ground Circuit Radio  
B1271 Theft Locked Radio  
B1291 Convertible Top Fifth Bow Position FTC  
B1325 Device Power 1 Circuit Voltage BCM  
B1327 Device Power 1 Circuit Low Audio Amplifier, DRR, DPM, FTC, HVAC, SDM, SCLCM, VCIM, DDS  
B1328 Device Power 1 Circuit High Audio Amplifier, FTC, HVAC, SCLCM, SDM  
B1336 Device Power 3 Circuit Range/Performance DPM/MSM  
B1370 Device Ignition 1 (ON and START) Circuit RCDLR  
B1420 Device Voltage DDM, PDM, FTC  
DPM/MSM  
B1440 Power Mode Master Input Circuits Mismatch RCDLR  
B1451 Accessory Power Circuit BCM  
B1474 Right Front Exterior Door Handle Switch Circuit DDM, PDM, RCDLR  
B1480 Battery Rundown Protection Circuit BCM  
B1580 Left Front Mirror Horizontal Position Sensor Circuit DDM, PDM  
B1590 Left Front Mirror Vertical Position Sensor Circuit DDM, PDM  
B1600 Mirror Motor 1 (vertical) Circuit DDM, PDM  
B1605 Mirror Motor 2 (horizontal) Circuit DDM, PDM  
B1697 Mirror Left-Up Control Switch Circuit Low DDSA  
B1702 Mirror Left-Down Control Switch Circuit Low DDSA  
B1707 Mirror Right-Up Control Switch Circuit Low DDSA  
B1712 Mirror Right-Down Control Switch Circuit Low DDSA  
B1735 Seat Front Up Switch Circuit DPM/MSM  
B1740 Seat Front Down Switch Circuit DPM/MSM  
B1745 Seat Rear Up Switch Circuit DPM/MSM  
B1750 Seat Rear Down Switch Circuit DPM/MSM  
B1755 Seat Assembly Horizontal Forward Switch Circuit DPM/MSM  
B1760 Seat Assembly Horizontal Rearward Switch Circuit DPM/MSM  
B1815 Seat Recline Forward Switch Circuit DPM/MSM  
B1820 Seat Recline Rearward Switch Circuit DPM/MSM  
B1825 Seat Recline Position Sensor Circuit DPM/MSM

B1826 Seat Recline Position Sensor Circuit Range/Performance DPM/MSM  
B2355 Seat Front Vertical Position Sensor Circuit DPM/MSM  
B2356 Seat Front Vertical Position Sensor Circuit Range/Performance DPM/MSM  
B2365 Seat Rear Vertical Position Sensor Circuit DPM/MSM  
B2366 Seat Rear Vertical Position Sensor Circuit Range/Performance DPM/MSM  
B2375 Seat Assembly Horizontal Position Sensor Circuit DPM/MSM  
B2376 Seat Assembly Horizontal Position Sensor Circuit Range/Performance  
DPM/MSM  
B2455 Cellular Phone Microphone Circuit VCIM  
B2462 Global Positioning System (GPS) Signal Error Navigation Radio  
B2470 Cellular Phone Antenna Circuit VCIM  
B2476 Cellular Phone Select Service Switch VCIM  
B2482 Cellular Phone Select Service Switch Performance VCIM  
B2483 Global Positioning System (GPS) Sensor Circuit Low VCIM  
B2484 Global Positioning System (GPS) Sensor Circuit Open VCIM  
B2510 Steering Column Lock Motor Unlock Circuit SCLCM  
B2515 Steering Column Lock Motor Feedback Circuit SCLCM  
B2517 Left Front Door Latch Circuit DDM, PDM  
B2518 Right Front Door Latch Circuit DDM, PDM  
B2527 Front Fog Lamps Circuit Low BCM  
B2528 Front Foglamps Circuit High BCM  
B2530 Front Foglamps Control Circuit BCM  
B2540 Rear Foglamps Control Circuit BCM  
B2567 Under hood Lamp Control Circuit Low BCM  
B2573 Trunk/Hatch Lamp Control Circuit High BCM  
B2580 Headlamp High Beam Control Circuit BCM  
B2625 Display Dimming Pulse Width Modulation (PWM) Output Circuit BCM  
B2710 Gearshift Lock Circuit RCDLR  
B2757 Memory 1 Select Switch Circuit Low DDM  
B2762 Memory 2 Select Switch Circuit Low DDM  
B2853 Telescope Forward Switch Circuit High DPM/MSM  
B2858 Telescope Rearward Switch Circuit High DPM/MSM  
B2860 Telescope Position Sensor DPM/MSM  
B2873 Tilt Up Switch Circuit High DPM/MSM  
B2878 Tilt Down Switch Circuit High DPM/MSM  
B2897 Steering Column Lock Motor Lock Circuit SCLCM  
B2907 Steering Column Lock Motor Enable Relay Circuit BCM, SCLCM  
B2910 Steering Column Lock Password Incorrect SCLCM  
B2981 Right Front Door Handle Switch Circuit DDM, PDM, RCDLR

B3089 Content Theft System Intrusion Sensor Signal Circuit BCM  
B3119 Keyless Entry Antenna 1 Performance RCDLR  
B3120 Keyless Entry Antenna 2 Performance RCDLR  
B3121 Keyless Entry Antenna 3 Performance RCDLR  
B3122 Keyless Entry Antenna 4 Performance RCDLR  
B3142 Left Front Unlock Switch Circuit Low DDSA  
B3145 Right Front Unlock Switch Circuit Low PDM  
B3152 Left Front Lock Switch Circuit Low DDSA  
B3155 Right Front Lock Switch Circuit Low PDM  
B3170 Right Front Window Up Switch Circuit PDM  
B3175 Right Front Window Down Switch Circuit PDM  
B3205 Left Front Window Motor Circuit DDM  
B3280 Right Front Window Express Up or Down Circuit PDM  
B3377 Left Front Window Up Switch Circuit Low DDSA  
B3382 Left Front Window Down Switch Circuit Low DDSA  
B3387 Right Front Window Up Switch Circuit Low DDSA  
B3392 Right Front Window Down Switch Circuit Low DDSA  
B3467 Left Front Window Express Up or Down Circuit Low DDSA  
B3472 Right Front Window Express Up or Down Circuit Low DDSA  
B3542 Left Front Window Obstruction Sensor Control Circuit DDM, PDM  
B3602 Convertible Top Control Switch FTC  
B3618 Exterior Trunk Release Switch Circuit Low BCM  
B3619 Head-Up Display (HUD) Change Page Switch Circuit HUD  
B3620 Head Up Display (HUD) Information Up Switch Circuit HUD  
B3621 Head Up Display (HUD) Information Down Switch Circuit HUD  
B3634 Head Up Display (HUD) Dimming (Up) Switch Circuit HUD  
B3659 Head Up Display (HUD) Dimming Down Switch Circuit HUD  
B3666 Rear Tonneau Position Error FTC  
B3667 Tonneau Release Circuit FTC  
B3670 Pump Motor Temperature Sensor Circuit FTC  
B3715 Front Wiper Relay Drive Circuit BCM  
B3744 Head Up Display (HUD) Mode Switch Circuit HUD  
B3794 Cruise Control Function Request Circuit BCM  
B3810 Headlamp Washer Relay Circuit BCM  
B3848 Interior Door Handle Switch Circuit DDM, PDM, RCDLR  
B3849 Left Front Exterior Door Handle Switch Circuit DDM, PDM, RCDLR  
B3948 Left Front Turn Signal Circuit BCM  
B3949 Right Front Turn Signal Circuit BCM  
B3950 Left Rear Turn Signal Circuit BCM

B3951 Right Rear Turn Signal Circuit BCM  
B3971 Folding Top Position Sensor FTC  
C0035 Left Front Wheel Speed Sensor Circuit EBCM  
C0040 Right Front Wheel Speed Sensor Circuit EBCM  
C0045 Left Rear Wheel Speed Sensor Circuit EBCM  
C0050 Right Rear Wheel Speed Sensor Circuit EBCM  
C0110 Pump Motor Circuit EBCM  
C0136 Base Brake System Pressure Circuit EBCM  
C0137 Base Brake System Pressure Circuit Range EBCM  
C0161 Antilock Brake System (ABS)/Traction Control System (TCS) Brake Switch  
Circuit EBCM  
C0179 System Thermal High EBCM  
C0186 Lateral Accelerometer Circuit EBCM  
C0196 Yaw Rate Circuit EBCM  
C0220 Left Front Antilock Brake System (ABS) Channel in Release Too Long EBCM  
C0221 Right Front Antilock Brake System (ABS) Channel in Release Too Long EBCM  
C0228 Left Rear Antilock Brake System (ABS) Channel in Release Too Long EBCM  
C0229 Right Rear Antilock Brake System (ABS) Channel in Release Too Long EBCM  
C0240 Powertrain Control Module (PCM) Traction Control Not Allowed EBCM  
C0242 Powertrain Control Module (PCM) Indicated TCS Malfunction EBCM  
C0249 Left Normal Force Error EBCM  
C0250 Right Normal Force Error EBCM  
C0252 Vehicle Stability Enhancement System (VSES) Sensors Uncorrelated EBCM  
C0253 Centering Error EBCM  
C0267 Low Brake Fluid Indicated EBCM  
C0277 Brake Pedal Position Sensor Circuit BCM  
C0278 Brake Pedal Position Sensor Not Calibrated BCM  
C0281 Dynamic Rear Proportioning (DRP) Performance EBCM  
C0550 Electronic Control Unit (ECU) Performance EBCM  
ESC  
C0551 Option Configuration Error EBCM  
C0558 Calibration Data Not Programmed ESC  
C0561 System Disabled Information Stored EBCM  
C0565 Vehicle Identification Number (VIN) Information Error EBCM  
C0575 Left Front Solenoid/Motor/Actuator Circuit ESC  
C0580 Right Front Solenoid/Motor/Actuator Circuit ESC  
C0585 Left Rear Solenoid/Motor/Actuator Circuit ESC  
C0590 Right Rear Solenoid/Motor/Actuator Circuit ESC  
C0615 Left Front Position Sensor Circuit ESC

C0620 Right Front Position Sensor Circuit ESC  
C0625 Left Rear Position Sensor Circuit ESC  
C0630 Right Rear Position Sensor Circuit ESC  
C0696 Position Sensor Overcurrent (5-volt supply) ESC  
C0710 Steering Position Signal RCDLR  
C0750 Left Front Low Tire Pressure Sensor RCDLR  
C0755 Right Front Low Tire Pressure Sensor RCDLR  
C0760 Left Rear Low Tire Pressure Sensor RCDLR  
C0765 Right Rear Low Tire Pressure Sensor RCDLR  
C0820 EBCM Case Voltage EBCM  
C0870 Device Voltage Reference Output 1 Circuit EBCM  
BCM  
C0895 Device Voltage ESC  
C0899 Device 1 Voltage Low EBCM  
C0900 Device 1 Voltage High EBCM  
C1241 Steering Assist Control Actuator Circuit EBCM  
P0016 Crankshaft Position (CKP)-Camshaft Position (CMP) Correlation ECM  
P0030 HO2S Heater Control Circuit Bank 1 Sensor 1 ECM  
P0036 HO2S Heater Control Circuit Bank 1 Sensor 2 ECM  
P0050 HO2S Heater Control Circuit Bank 2 Sensor 1 ECM  
P0056 HO2S Heater Control Circuit Bank 2 Sensor 2 ECM  
P0068 Throttle Body Airflow Performance ECM  
P0101 Mass Air Flow (MAF) Sensor Performance ECM  
P0102 Mass Air Flow (MAF) Sensor Circuit Low Frequency ECM  
P0103 Mass Air Flow (MAF) Sensor Circuit High Frequency ECM  
P0106 Manifold Absolute Pressure (MAP) Sensor Performance ECM  
P0107 Manifold Absolute Pressure (MAP) Sensor Circuit Low Voltage ECM  
P0108 Manifold Absolute Pressure (MAP) Sensor Circuit High Voltage ECM  
P0112 Intake Air Temperature (IAT) Sensor Circuit Low Voltage ECM  
P0113 Intake Air Temperature (IAT) Sensor Circuit High Voltage ECM  
P0116 Engine Coolant Temperature (ECT) Sensor Performance ECM  
P0117 Engine Coolant Temperature (ECT) Sensor Circuit Low Voltage ECM  
P0118 Engine Coolant Temperature (ECT) Sensor Circuit High Voltage ECM  
P0120 Throttle Position (TP) Sensor 1 Circuit ECM  
P0121 Throttle Position (TP) Sensor 1 Performance ECM  
P0122 Throttle Position (TP) Sensor 1 Circuit Low Voltage ECM  
P0123 Throttle Position (TP) Sensor 1 Circuit High Voltage ECM  
P0128 Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature  
ECM

P0131 HO2S Circuit Low Voltage Bank 1 Sensor 1 ECM  
P0132 HO2S Circuit High Voltage Bank 1 Sensor 1 ECM  
P0133 HO2S Slow Response Bank 1 Sensor 1 ECM  
P0134 HO2S Circuit Insufficient Activity Bank 1 Sensor 1 ECM  
P0135 HO2S Heater Performance Bank 1 Sensor 1 ECM  
P0136 HO2S Circuit Bank 1 Sensor 2 ECM  
P0137 HO2S Circuit Low Voltage Bank 1 Sensor 2 ECM  
P0138 HO2S Circuit High Voltage Bank 1 Sensor 2 ECM  
P0140 HO2S Circuit Insufficient Activity Bank 1 Sensor 2 ECM  
P0141 HO2S Heater Performance Bank 1 Sensor 2 ECM  
P0151 HO2S Circuit Low Voltage Bank 2 Sensor 1 ECM  
P0152 HO2S Circuit High Voltage Bank 2 Sensor 1 ECM  
P0153 HO2S Slow Response Bank 2 Sensor 1 ECM  
P0154 HO2S Circuit Insufficient Activity Bank 2 Sensor 1 ECM  
P0155 HO2S Heater Performance Bank 2 Sensor 1 ECM  
P0156 HO2S Circuit Bank 2 Sensor 2 ECM  
P0157 HO2S Circuit Low Voltage Bank 2 Sensor 2 ECM  
P0158 HO2S Circuit High Voltage Bank 2 Sensor 2 ECM  
P0160 HO2S Circuit Insufficient Activity Bank 2 Sensor 2 ECM  
P0161 HO2S Heater Performance Bank 2 Sensor 2 ECM  
P0171 Fuel Trim System Lean Bank 1 ECM  
P0172 Fuel Trim System Rich Bank 1 ECM  
P0174 Fuel Trim System Lean Bank 2 ECM  
P0175 Fuel Trim System Rich Bank 2 ECM  
P0201 Injector 1 Control Circuit ECM  
P0202 Injector 2 Control Circuit ECM  
P0203 Injector 3 Control Circuit ECM  
P0204 Injector 4 Control Circuit ECM  
P0205 Injector 5 Control Circuit ECM  
P0206 Injector 6 Control Circuit ECM  
P0207 Injector 7 Control Circuit ECM  
P0208 Injector 8 Control Circuit ECM  
P0218 Transmission Fluid Overtemperature TCM  
P0220 Throttle Position (TP) Sensor 2 Circuit ECM  
P0222 Throttle Position (TP) Sensor 2 Circuit Low Voltage ECM  
P0223 Throttle Position (TP) Sensor 2 Circuit High Voltage ECM  
P0230 Fuel Pump Relay Control Circuit ECM  
P0300 Engine Misfire Detected ECM  
P0315 Crankshaft Position (CKP) System Variation Not Learned ECM



P0325 Knock Sensor (KS) Circuit ECM  
P0326 Knock Sensor (KS) Performance ECM  
P0327 Knock Sensor (KS) 1 Circuit Low Frequency ECM  
P0332 Knock Sensor (KS) 2 Circuit Low Frequency ECM  
P0335 Crankshaft Position (CKP) Sensor Circuit ECM  
P0336 Crankshaft Position (CKP) Sensor Performance ECM  
P0340 Camshaft Position (CMP) Sensor Circuit ECM  
P0341 Camshaft Position (CMP) Sensor Performance ECM  
P0351 Ignition Coil 1 Control Circuit ECM  
P0352 Ignition Coil 3 Control Circuit ECM  
P0353 Ignition Coil 3 Control Circuit ECM  
P0354 Ignition Coil 4 Control Circuit ECM  
P0355 Ignition Coil 5 Control Circuit ECM  
P0356 Ignition Coil 6 Control Circuit ECM  
P0357 Ignition Coil 7 Control Circuit ECM  
P0358 Ignition Coil 8 Control Circuit ECM  
P0420 Catalyst System Low Efficiency Bank 1 ECM  
P0430 Catalyst System Low Efficiency Bank 2 ECM  
P0442 Evaporative Emission (EVAP) System Small Leak Detected ECM  
P0443 Evaporative Emission (EVAP) Purge Solenoid Control Circuit ECM  
P0446 Evaporative Emission (EVAP) Vent System Performance ECM  
P0449 Evaporative Emission (EVAP) Vent Solenoid Control Circuit ECM  
P0451 Fuel Tank Pressure (FTP) Sensor Performance ECM  
P0452 Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage ECM  
P0453 Fuel Tank Pressure (FTP) Sensor Circuit High Voltage ECM  
P0454 Fuel Tank Pressure (FTP) Sensor Circuit Intermittent ECM  
P0455 Evaporative Emission (EVAP) System Large Leak Detected ECM  
P0461 Fuel Level Sensor 1 Performance ECM  
P0462 Fuel Level Sensor 1 Circuit Low Voltage ECM  
P0463 Fuel Level Sensor 1 Circuit High Voltage ECM  
P0464 Fuel Level Sensor Circuit Intermittent ECM  
P0496 Evaporative Emission (EVAP) System Flow During Non-Purge ECM  
P0502 Vehicle Speed Sensor (VSS) Circuit Low Voltage ECM  
P0503 Vehicle Speed Sensor (VSS) Circuit Intermittent ECM  
P0506 Idle Speed Low ECM  
P0507 Idle Speed High ECM  
P0521 Engine Oil Pressure (EOP) Sensor Performance ECM  
P0522 Engine Oil Pressure (EOP) Sensor Circuit Low Voltage ECM  
P0523 Engine Oil Pressure (EOP) Sensor Circuit High Voltage ECM

P0531 Air Conditioning (A/C) Refrigerant Pressure Sensor Performance HVAC  
P0532 Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low Voltage HVAC  
P0533 Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit High Voltage HVAC  
P0562 System Voltage Low ECM  
TCM  
P0563 System Voltage High ECM  
TCM  
P0572 Brake Switch Circuit 1 Low Voltage ECM  
P0573 Brake Switch Circuit 1 High Voltage ECM  
P0575 Cruise Control Switch Signal Circuit ECM  
P0601 Control Module Read Only Memory (ROM) ECM  
P0601 Transmission Control Module (TCM) Read Only Memory (ROM) TCM  
P0602 Control Module Not Programmed ECM  
P0602 Transmission Control Module (TCM) Not Programmed TCM  
P0603 Control Module Long Term Memory Reset ECM  
P0603 Transmission Control Module (TCM) Long Term Memory Reset TCM  
P0604 Control Module Random Access Memory (RAM) ECM  
P0604 Transmission Control Module (TCM) Random Access Memory (RAM) TCM  
P0606 Control Module Internal Performance ECM  
P0607 Control Module Performance ECM  
P0608 Vehicle Speed Output Circuit ECM  
P060E Control Module Throttle Position (TP) System Performance ECM  
P060D Control Module Accelerator Pedal Position (APP) System Performance ECM  
P0615 Starter Relay Control Circuit ECM  
P0621 Generator L-Terminal Circuit ECM  
P0622 Generator F-Terminal Circuit ECM  
P0641 5-Volt Reference 1 Circuit ECM  
P0646 Air Conditioning (A/C) Clutch Relay Control Circuit Low Voltage HVAC  
P0647 Air Conditioning (A/C) Clutch Relay Control Circuit High Voltage HVAC  
P0650 Malfunction Indicator Lamp (MIL) Control Circuit ECM  
P0651 5-Volt Reference 2 Circuit ECM  
P0654 Engine Speed Output Circuit ECM  
P0685 Engine Controls Ignition Relay Control Circuit ECM  
P0689 Engine Controls Ignition Relay Feedback Circuit Low Voltage ECM  
P0690 Engine Controls Ignition Relay Feedback Circuit High Voltage ECM  
P0700 Transmission Control Module (TCM) Requested MIL Illumination ECM  
P0703 Brake Switch 2 Circuit TCM  
P0711 Transmission Fluid Temperature (TFT) Sensor Performance TCM  
P0712 Transmission Fluid Temperature (TFT) Sensor Circuit Low Voltage ECM

TCM

P0713 Transmission Fluid Temperature (TFT) Sensor Circuit High Voltage ECM

TCM

P0719 Brake Switch Circuit Low Voltage TCM

P0722 Output Speed Sensor Circuit Low Voltage TCM

P0723 Output Speed Sensor Circuit Intermittent TCM

P0724 Brake Switch Circuit High Voltage TCM

P0741 Torque Converter Clutch (TCC) System - Stuck Off TCM

P0742 Torque Converter Clutch (TCC) System - Stuck On TCM

P0751 1-2 Shift Solenoid (SS) Valve Performance - No First or Fourth Gear TCM

P0752 1-2 Shift Solenoid (SS) Valve Performance - No Second or Third Gear TCM

P0756 2-3 Shift Solenoid (SS) Valve Performance - No First or Second Gear TCM

P0757 2-3 Shift Solenoid (SS) Valve Performance - No Third or Fourth Gear TCM

P0787 3-2 Shift Solenoid (SS) Control Circuit Low Voltage TCM

P0788 3-2 Shift Solenoid (SS) Control Circuit High Voltage TCM

P0801 Reverse Inhibit Solenoid Control Circuit ECM

P0803 Skip Shift Solenoid Control Circuit ECM

P0833 Clutch Pedal Switch 2 Circuit ECM

P0894 Transmission Component Slipping TCM

P0961 Line Pressure Control (PC) Solenoid System Performance TCM

P0973 1-2 Shift Solenoid (SS) Control Circuit Low Voltage TCM

P0974 1-2 Shift Solenoid (SS) Control Circuit High Voltage TCM

P0976 2-3 Shift Solenoid (SS) Control Circuit Low Voltage TCM

P0977 2-3 Shift Solenoid (SS) Control Circuit High Voltage TCM

P1101 Intake Air Flow System Performance ECM

P1133 HO2S Insufficient Switching Bank 1 Sensor 1 ECM

P1134 HO2S Transition Time Ratio Bank 1 Sensor 1 ECM

P1153 HO2S Insufficient Switching Bank 2 Sensor 1 ECM

P1154 HO2S Transition Time Ratio Bank 2 Sensor 1 ECM

P1258 Engine Coolant Overtemperature - Protection Mode Active ECM

P1380 Misfire Detected - Rough Road Data Not Available ECM

P1381 Misfire Detected - No Communication With Brake Control Module ECM

P1482 Cooling Fan Speed Output Circuit ECM

P1516 Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance ECM

P1617 Engine Oil Level Switch Circuit ECM

P1621 Control Module Long Term Memory Performance ECM

P1621 Transmission Control Module (TCM) Long Term Memory Performance TCM

P1630 Theft Deterrent Learn Mode Active ECM

P1631 Theft Deterrent Fuel Enable Signal Not Correct ECM  
P1682 Ignition 1 Switch Circuit 2 ECM  
P1810 Transmission Fluid Pressure (TFP) Position Switch Circuit TCM  
P1815 Transmission Fluid Pressure (TFP) Valve Position Switch - Start in Wrong Range TCM  
P1816 Transmission Fluid Pressure (TFP) Valve Position Switch Indicates Park/Neutral (P/N) with Drive Ratio TCM  
P2066 Fuel Level Sensor 2 Performance ECM  
P2067 Fuel Level Sensor 2 Circuit Low Voltage ECM  
P2068 Fuel Level Sensor 2 Circuit High Voltage ECM  
P2101 Control Module Throttle Actuator Position Performance ECM  
P2119 Throttle Closed Position Performance ECM  
P2120 Accelerator Pedal Position (APP) Sensor 1 Circuit ECM  
P2122 Accelerator Pedal Position (APP) Sensor 1 Circuit Low Voltage ECM  
P2123 Accelerator Pedal Position (APP) Sensor 1 Circuit High Voltage ECM  
P2125 Accelerator Pedal Position (APP) Sensor 2 Circuit ECM  
P2127 Accelerator Pedal Position (APP) Sensor 2 Circuit Low Voltage ECM  
P2128 Accelerator Pedal Position (APP) Sensor 2 Circuit High Voltage ECM  
P2135 Throttle Position (TP) Sensor 1-2 Correlation ECM  
P2138 Accelerator Pedal Position (APP) Sensor 1-2 Correlation ECM  
P2176 Minimum Throttle Position Not Learned ECM  
P2610 Control Module Ignition Off Timer Performance ECM  
P2763 Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit High Voltage TCM  
P2764 Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit Low Voltage TCM  
P2769 Torque Converter Clutch (TCC) Enable Solenoid Control Circuit Low Voltage TCM  
P2770 Torque Converter Clutch (TCC) Enable Solenoid Control Circuit High Voltage TCM  
U0001 High Speed CAN Communication Bus ECM  
U0101 Lost Communications with Transmission Control Module (TCM) ECM  
U0121 Lost Communications with Electronic Brake Control Module (EBCM) ECM  
U0140 Lost Communication With Body Control Module (BCM) ECM  
U1000 Class 2 Data Link BCM, DDM, DDS, DPM, DRR, FTC, HUD, IPC, PDM, Radio, RCDLR, SCLCM, SDM, VCIM  
U1017 Lost Communications with Engine Control Module (ECM) DDM, DDS, DRR, FTC, HVAC, HUD, IPC, PDM, Radio, RCDLR, SDM, VCIM  
U1024 Lost Communications with Transmission Control Module (TCM) DDS, DDM,

DPM, FTC, IPC, HUD, PDM, Radio, RCDLR  
U1040 Lost Communications with Electronic Brake Control Module (EBCM) IPC  
U1064 Lost Communications with Body Control Module (BCM) DDM, DDS, DPM, DRR, FTC, HVAC, HUD, IPC, PDM, Radio, RCDLR, SDM, VCIM  
U1088 Lost Communication with Sensing and Diagnostic Module (SDM) BCM, IPC  
U1096 Lost Communication with Instrument Panel Cluster (IPC) BCM, DDM, HUD, HVAC, PDM, Radio, SDM  
U1098 Lost Communications with Head Up Display (HUD) BCM, IPC  
U1128 Lost Communications with Radio DRR, IPC, HUD  
U1137 Lost Communications with Digital Radio Receiver (DRR) Radio  
U1151 Lost Communications with Communication Interface Module (OnStar®) IPC  
U1153 Lost Communication with HVAC Control Module BCM, DDM, IPC, HUD, PDM, Radio  
U1160 Lost Communications with Driver Door Module (DDM) IPC  
U1161 Lost Communications with Passenger Door Module (PDM) IPC  
U1164 Lost Communications with Driver Door Switch (DDS) DDM, DPM, DRR, IPC, PDM, Radio, RCDLR  
U1166 Lost Communication with Driver Position Module (DPM) IPC  
U1177 Lost Communications with Folding Top Controller (FTC) DDM, HVAC, IPC, PDM  
U1193 Lost Communications with Remote Control Door Lock Receiver (RCDLR) BCM, DDM, DDS, DPM, DRR, FTC, HVAC, HUD, IPC, PDM, Radio, SDM, VCIM  
U1194 Lost Communications with Steering Column Lock Control Module (SCLCM) BCM, IPC  
U1255 Class 2 Data Link HVAC  
U1300 Class 2 Data Link Low DDM, DDS, DRR, HVAC, IPC, PDM, Radio, SDM, VCIM  
U1301 Class 2 Data Link High DDM, DDS, DRR, HVAC, IPC, PDM, Radio, SDM, VCIM  
U1305 Class 2 Data Link Low or High BCM, DPM, FTC, HUD, SCLCM  
U1500 Inter-device Dedicated Bus 1 VCIM  
U2100 Controller Area Network (CAN) Bus Communication ESC, BCM, EBCM, TCM  
U2105 Lost Communication with Engine Control Module (ECM) BCM, EBCM, ESC, TCM  
U2106 Lost Communication With Transmission Control Module (TCM) BCM, EBCM  
U2107 Lost Communication With Body Control Module (BCM) EBCM, ESC, TCM  
U2108 Lost Communication With Electronic Brake Control Module (EBCM) BCM, ESC, TCM  
U2112 Lost Communications With Electronic Suspension Control Module (ESC) EBCM

U2153 Navigation Electronic Control Unit (ECU) - VICS Communication Circuit  
Navigation Radio

Online URL:

<https://www.corvetteactioncenter.com/tech/knowledgebase/article/2005-corvette-ls2-engine-trouble-codes-listing-332.html>