1984 Corvette: Service Bulletin: Dealer Installed Anchor for Child Seat with Top Strap Anchor Installation

Subject: Dealer Installed Anchor for Child Seat with Top Strap Anchor

Installation

Model and Year: 1984 Corvette

Source: Chevrolet Dealer Service Technical Bulletin

Bulletin No: 84-121

Section: 10 (I) **Date:** May 1984

TO: ALL CHEVROLET DEALERS

Should a customer request the installation of a child seat top tether anchor, in their 1984 Corvette, the following installation steps are to be performed:

- 1. Remove rear floor carpet and insulator.
- 2. Drill a 9mm (11/32 inch) diameter hole through the front at the location shown in Figure #1. **CAUTION:** Double check hole location to avoid damage to the vehicle under-carriage components.
- 3. Reinstall insulator, cut 38mm (1 1/2 inch) diameter hole for washer/spacer*. Reinstall the carpet and cut a 9mm (11/32 inch) diameter hole for the anchor attachment bolt.
- 4. Using a suitable sealer, such as silicone or butyl type caulking, apply a bead of sealant around the 9mm (11/32 inch) drilled hole in the floor pan. **NOTICE:** The sealant is to be applied on the outer side of the floor pan (see Figure #2).
- 5. Install the tether anchor bracket, as shown in Figure #2, and tighten nut securely. **NOTICE:** In the event the tether anchor assembly is

removed, the 9mm diameter hole must be properly resealed to prevent exhaust fumes from entering the vehicle.

* Washer/spacers (not supplied):

Three (3) flat washers 32 mm (1 1/4 inch) x 3mm (1/8 inch) thick, with a 9mm (11/32 inch) diameter hole. Total stack-up of washer/spacer is to be 9.5mm (3/8 inch).

Chevrolet Motor Division General Motors Corporation


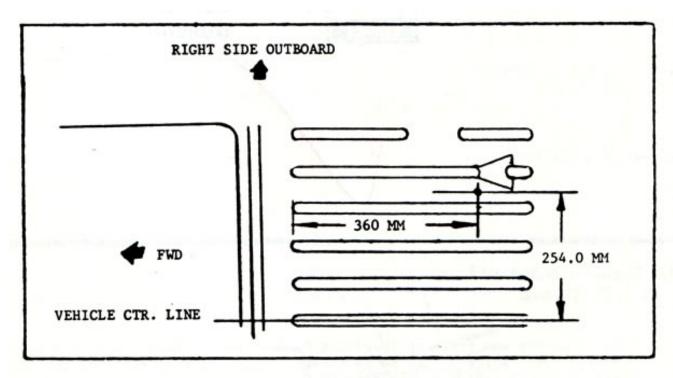


FIGURE #1

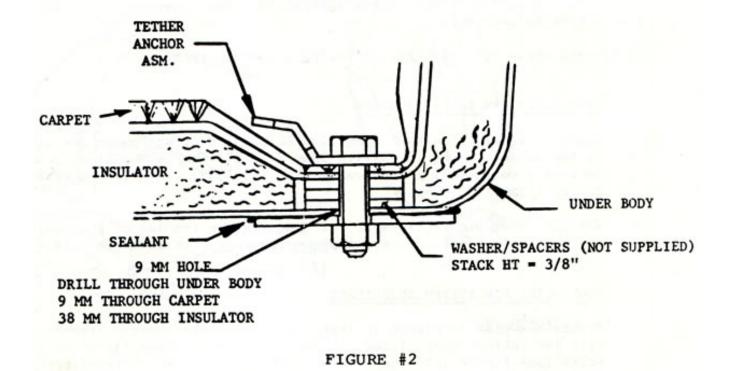

Online URL:

https://www.corvetteactioncenter.com/tech/knowledgebase/article/1984-corvette-service-bulletin-dealer-installed-anchor-for-child-seat-with-top-strap-

anchor-installation-945.html